


Assembly Instruction

Component list:


A 3PCS

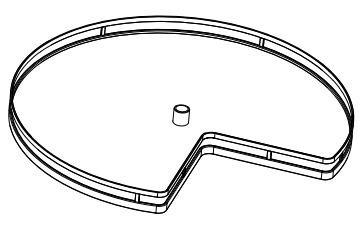

B 1PCS



C 1PCS



D 1PCS



E 1PCS




F 1PCS



G 3PCS



H 4PCS



I 6PCS




J 1PCS



specification mm	wardrobe Inner Width
$\phi 710 * H935 \text{mm}$	$\geq 764 \text{mm}$



Product Drawing

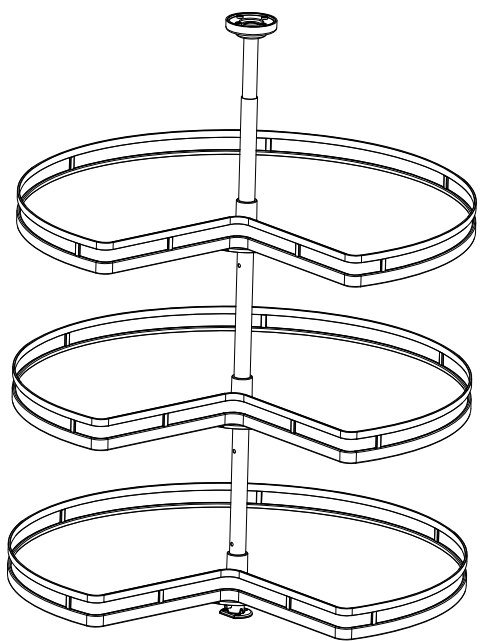

Assembly Steps:


Pls assemble the product following the steps in order

1. Drill the holes according to the size instruction on the kraft

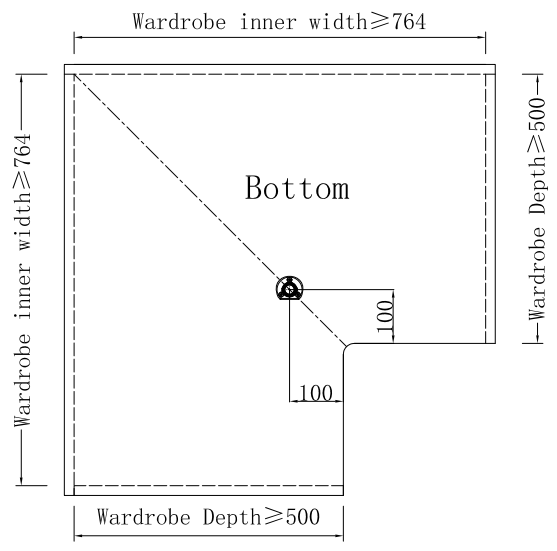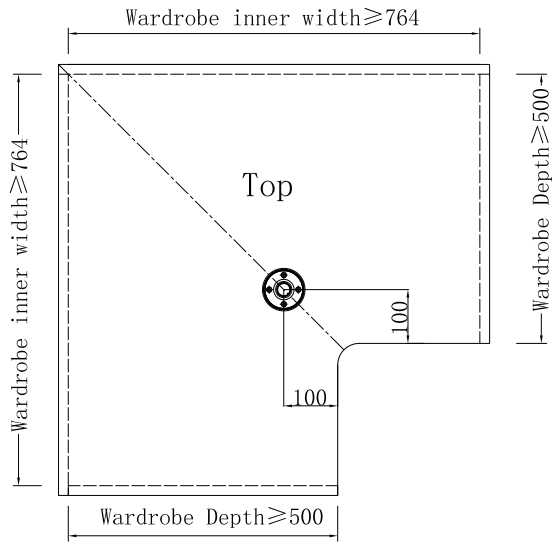


Assembly Instruction

2. Follow the drawing to assemble the product

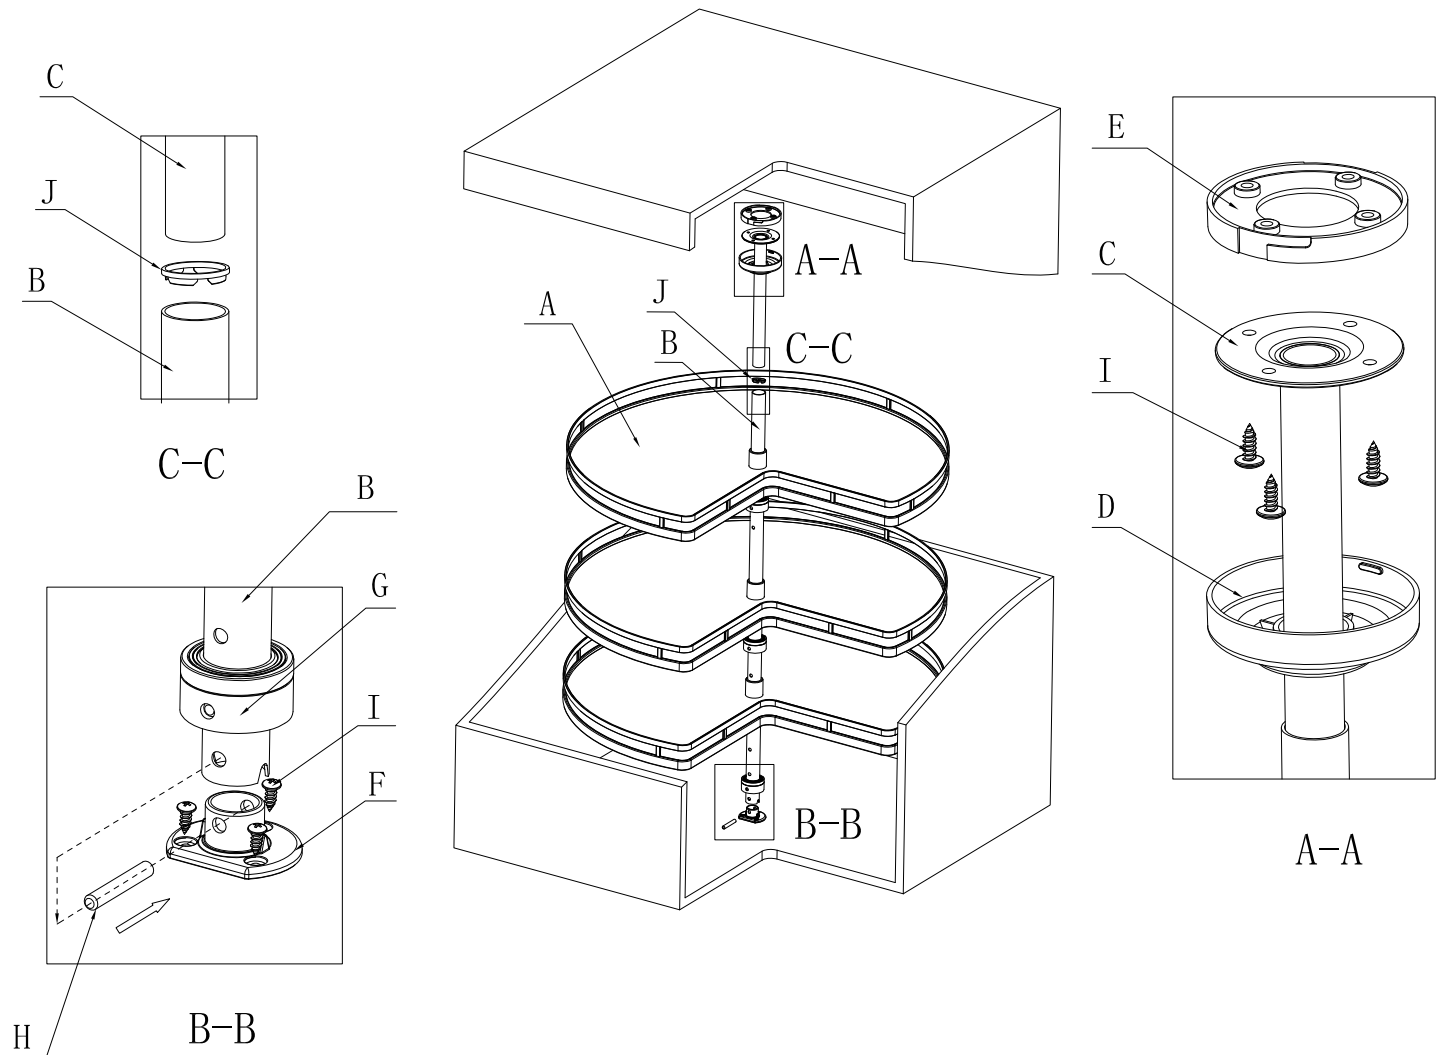

2

3. Revolving G to the right position and insert H for fixation

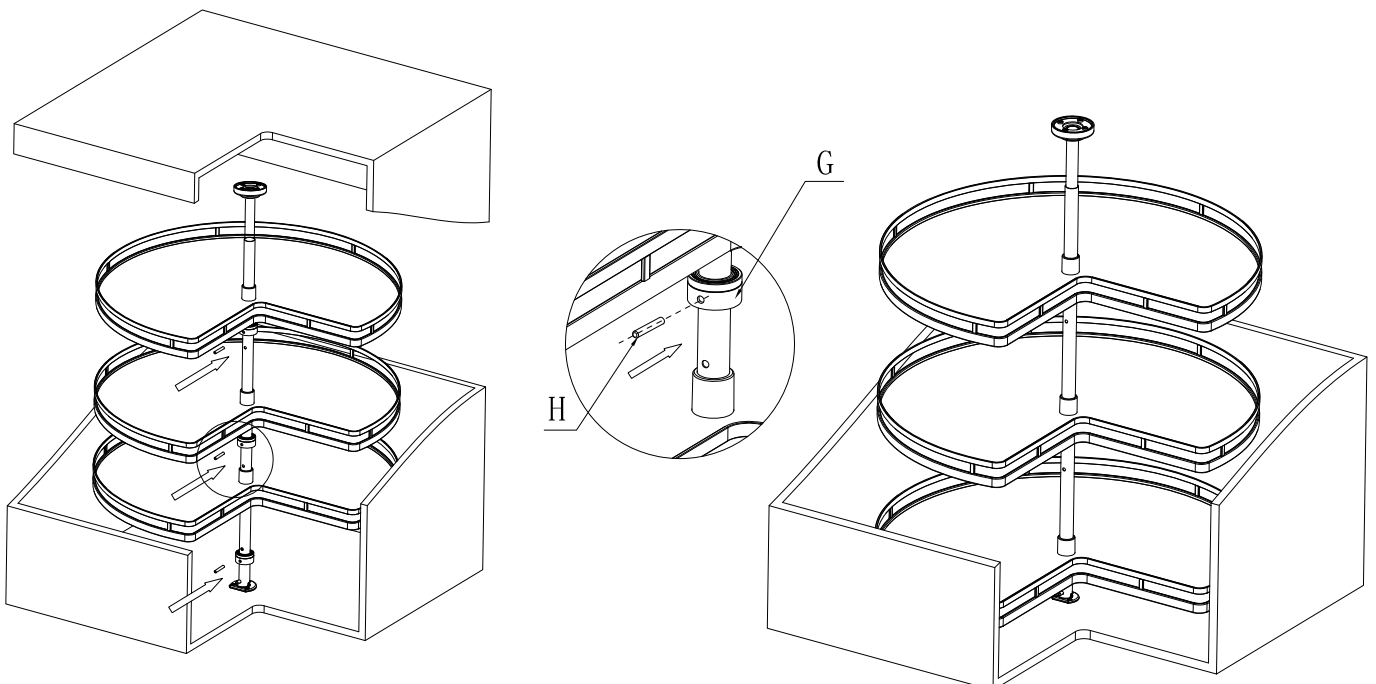

3