



INSTALLATION INSTRUCTION


1, Standard size:
Min. cabinet width:800mm;
Min. cabinet depth:500mm
Min. door width:450mm;
Applicative cabinet height:650-750mm.

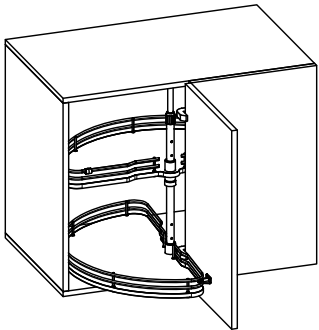








Left open

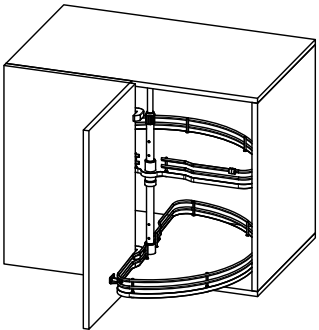


Right open

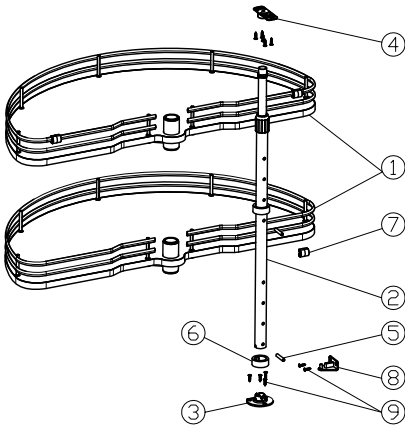



Accessory
List

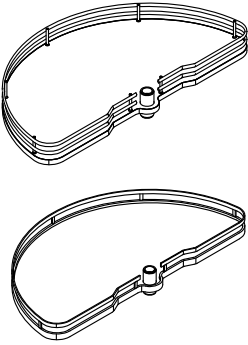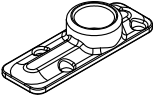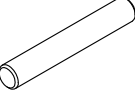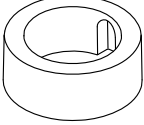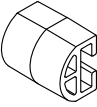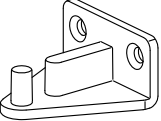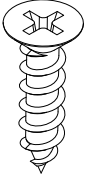① Basket	② pillar	③ base	④top plastic	⑤ bolt
2 set	1 set	1 pcs	1 pcs	2 pcs
				
⑥ axle ring	⑦ anti-collision	⑧ connective part	⑨ ST4×16	
2 pcs	3 pcs	1 pcs	11 pcs	
				

Applicative size:

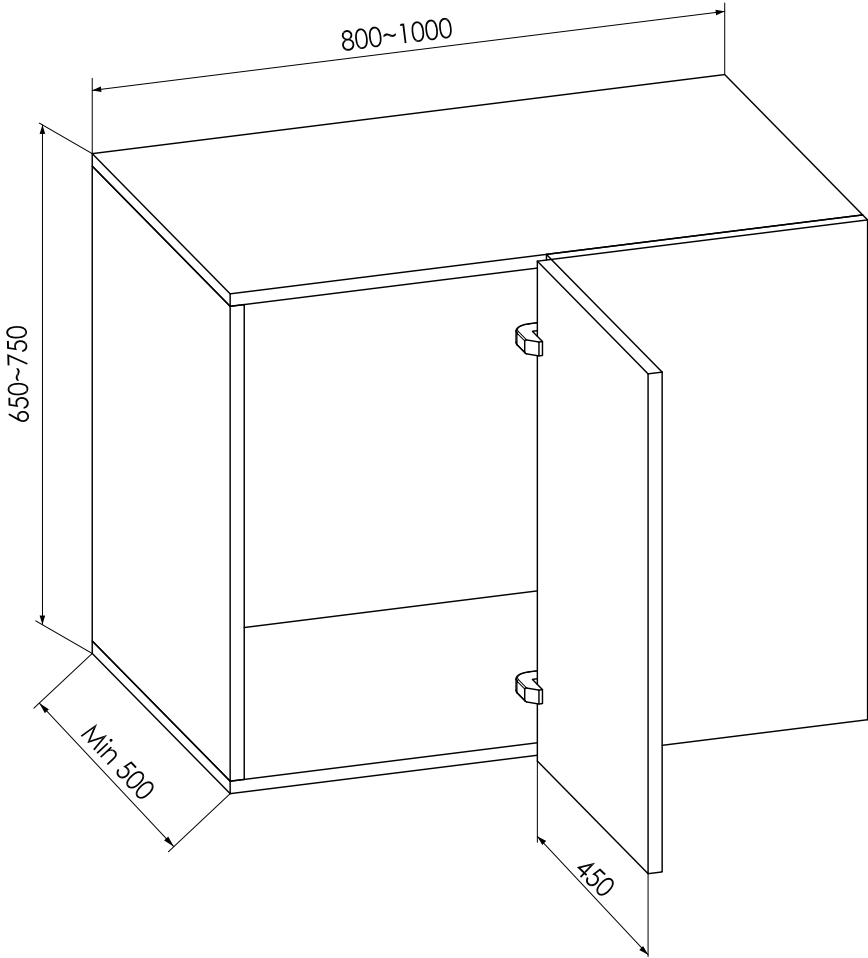


Installation step:
1, base hole size

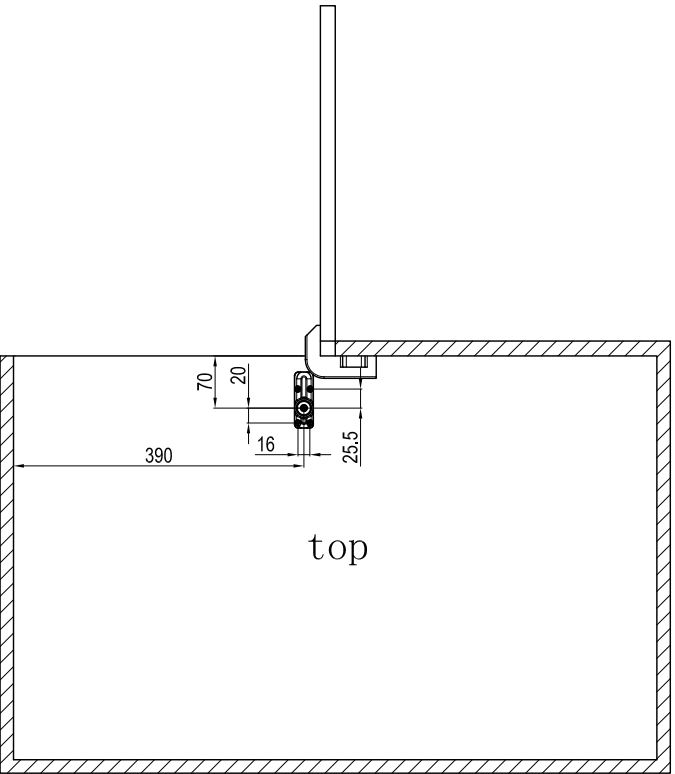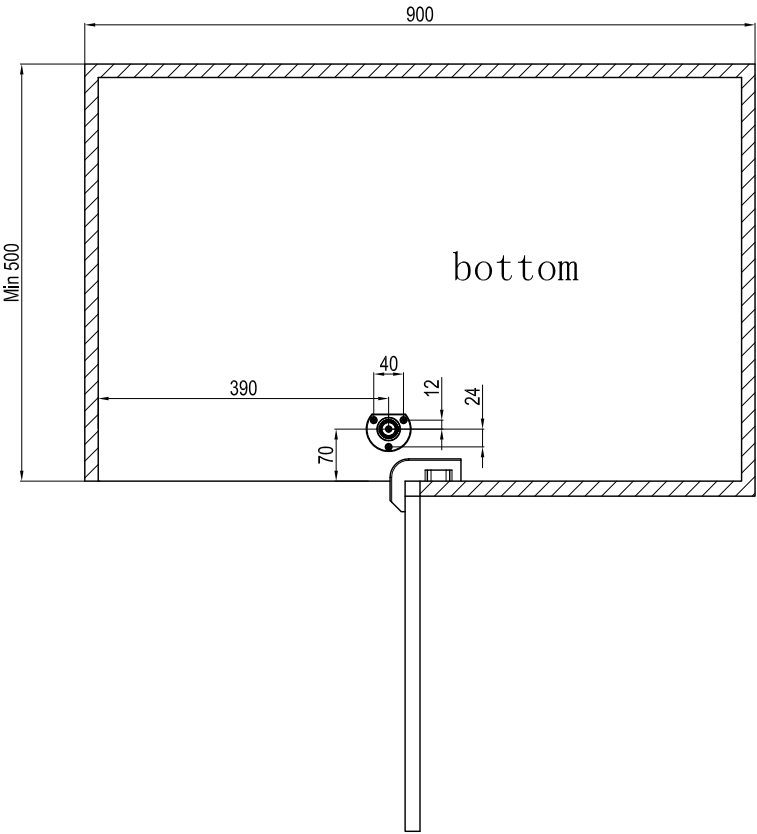


Step 2:

2.1 fix part ③ ④ onto top and bottom with screw ST4*16,

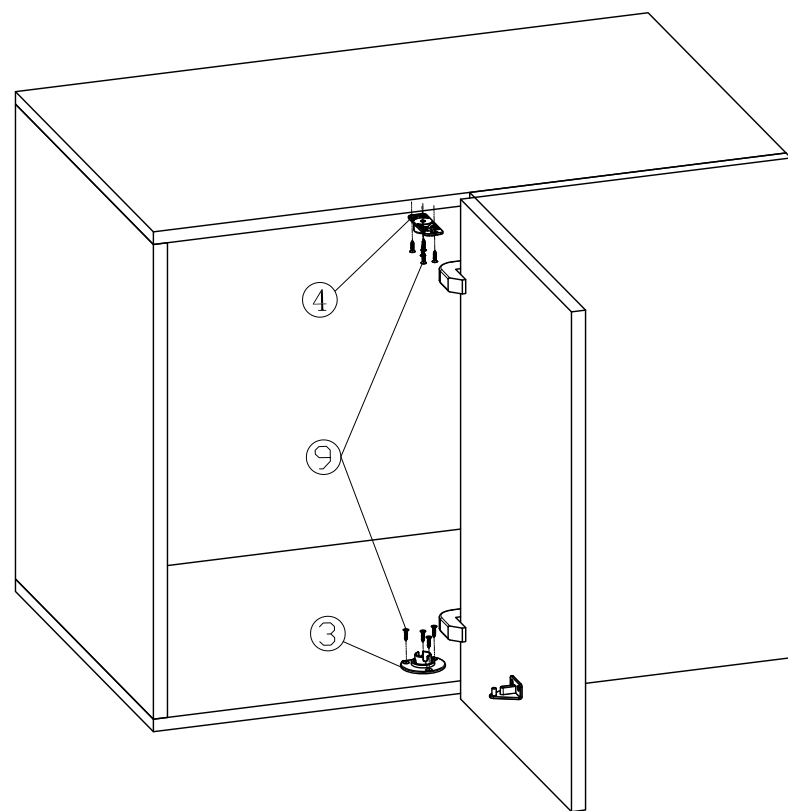


Step 3:

assemble two shelves with pillar, fix relevant parts onto the pillar

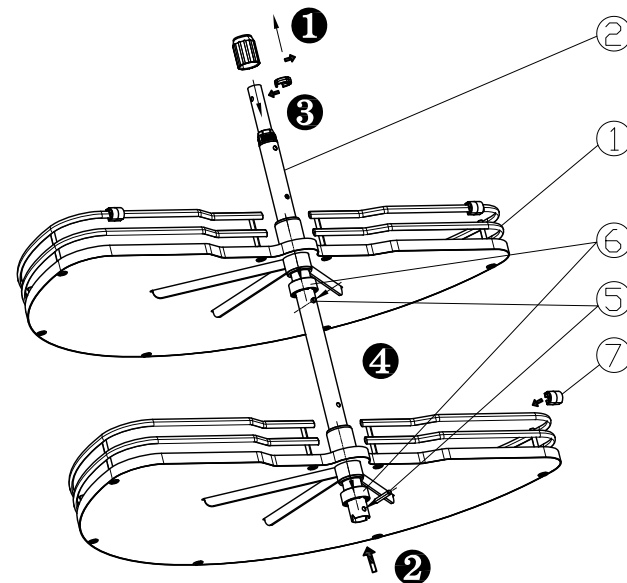


Step 4:

4.1 put the shelves into the right position of bases
4.2 adjust the height, fasten it

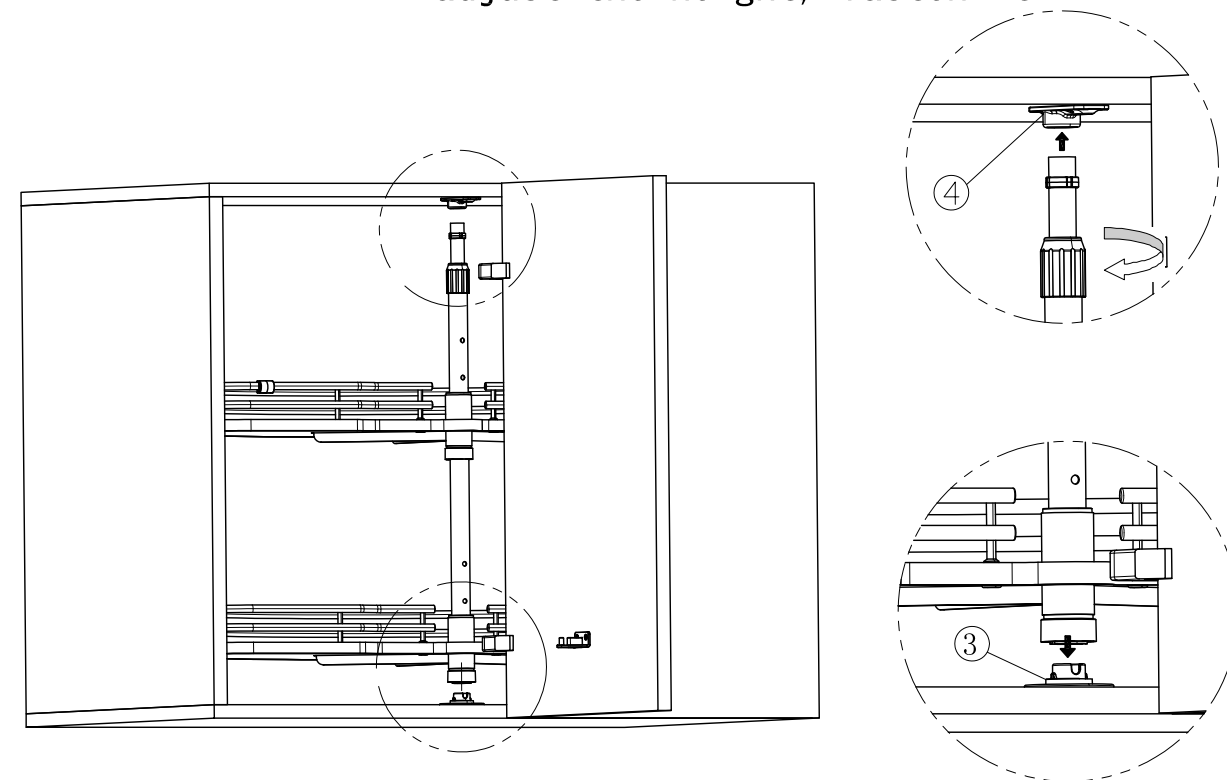

Step 5:

Fix part ⑧ onto the right position of door, with screw ST14*16

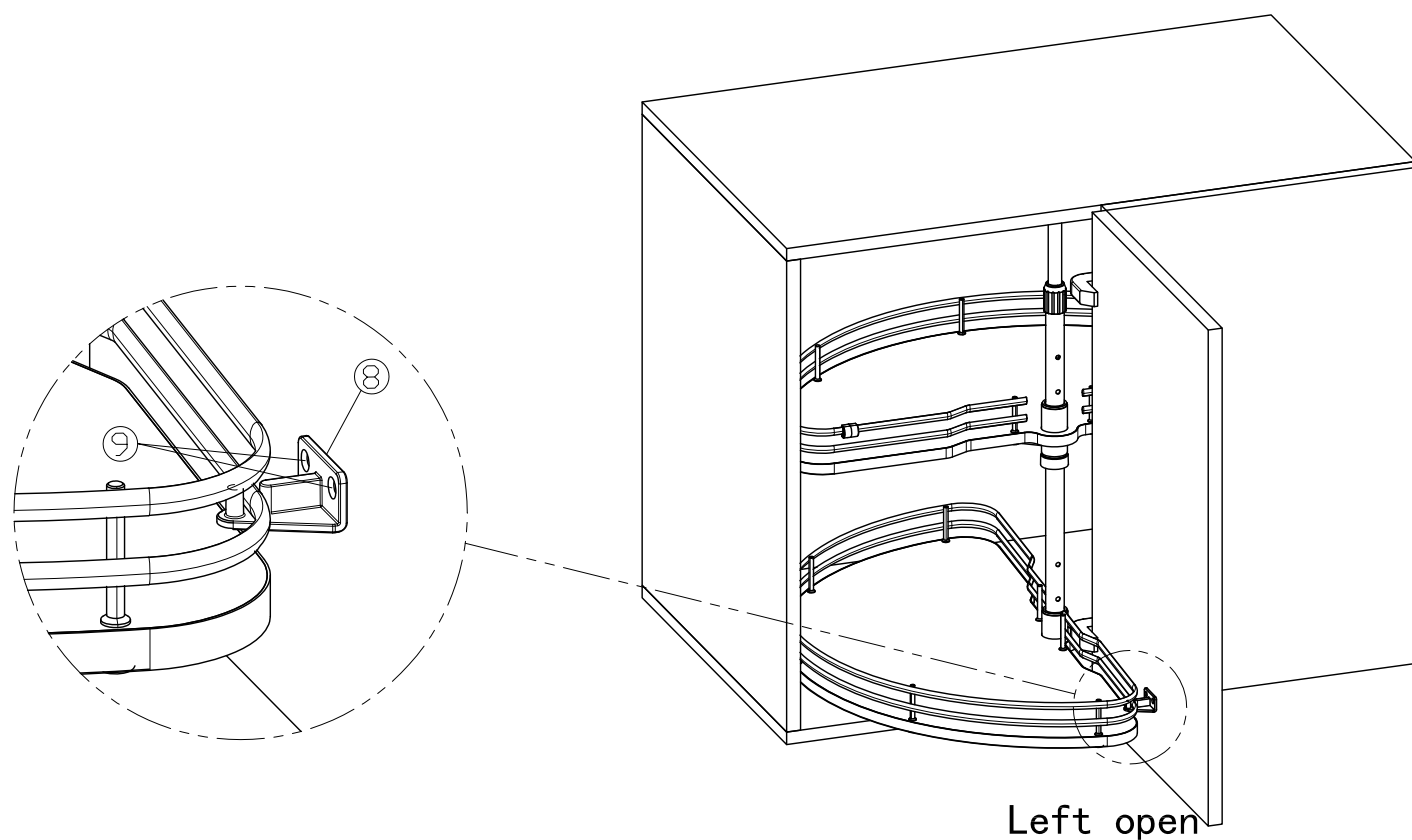

Step 6:
Finish

