



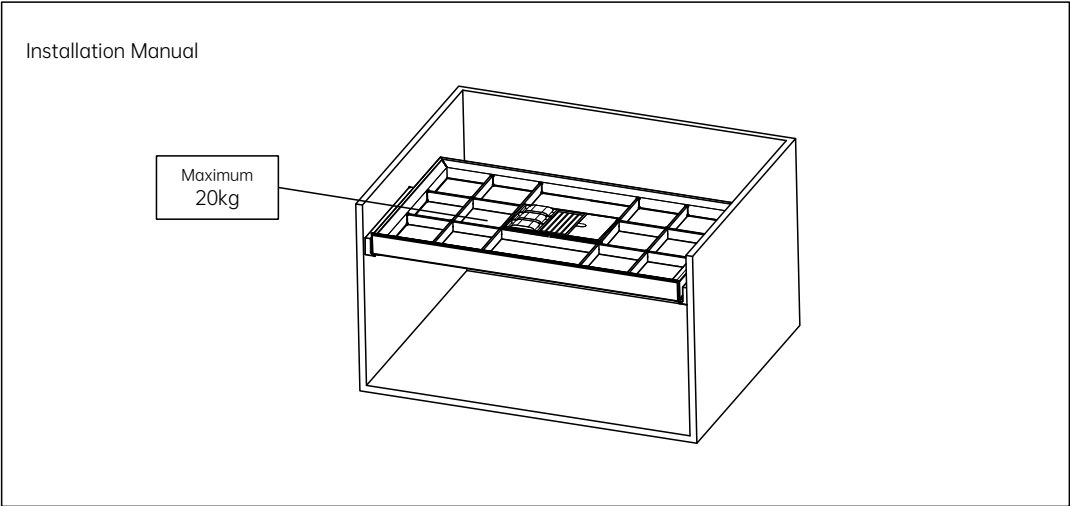

# Installation instruction

## Preview



## Parts list


<b>A</b>	X 1SET	<b>B</b>	X 8PCS	<b>C</b>	X 1PCS
					
Rail		M4*25 Self-tapping screws		High-End Decorations Rack Frame	

## Product Specifications and Applicable Cabinet Width


Specifications (W x D x H) mm	Applicable Cabinet Internal Width (Y) mm
564x464x66	560-568mm
664x464x66	660-668mm
764x464x66	760-768mm
864x464x66	860-868mm

## Installation Steps


1.

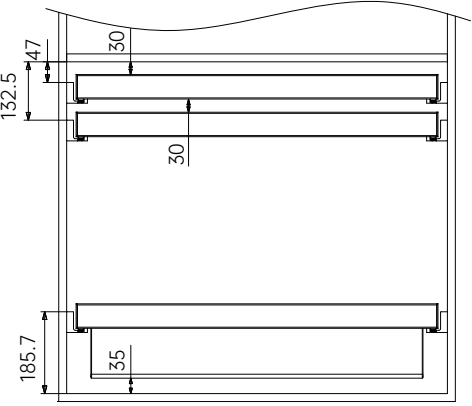


2. Install part A according to the hole dimensions.

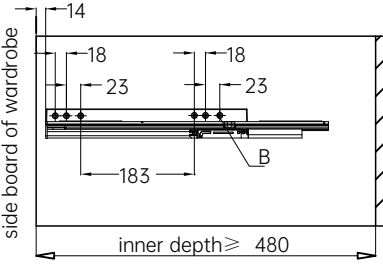

3. Secure A to the side board with B, ensuring that A on both sides are at the same horizontal level.

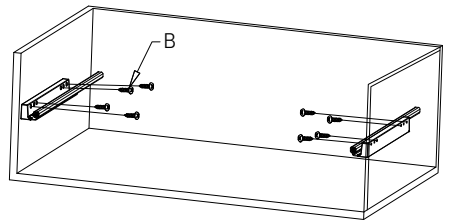

4. Install C. C comes with adhesive Velcro, align it with the Velcro on A and adjust it to be horizontal during installation.

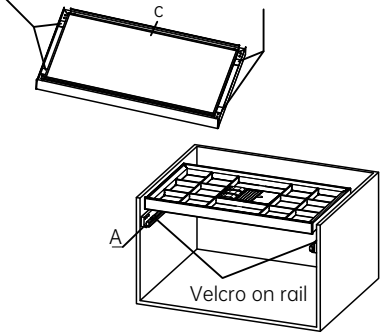

The quantity and style of the dividers are for reference only, and the 600/700 cabinets do not come with a watch holder.