

NUOMI诺米

广东诺米家居智能科技有限公司

地址:广东省佛山市南海区丹灶镇金泰路3号

Tel:0757-86602177

Fax:0757-86602166

服务热线:400-831-7997

网址:www.nuomihome.com.cn

E-mail:nx02@gz-nuomi.com

GUANGDONG NUOMI HOME INTELLIGENT TECHNOLOGY CO.,LTD

Add: NO.3, Jintai RD, Danzao Town, Foshan City, Guangdong Province, China

Tel:0757-86602177

Fax:0757-86602166

Service Hotline:400-831-7997

Website:www.nuomihome.com

E-mail:nx02@gz-nuomi.com



诺米订阅号
NUOMI QR CODE



诺米中文网
NUOMI HOMEPAGE

NUOMI诺米

一体式摇表器指纹抽说明书

SMART CODE CASE INSTRUCTION




全 | 屋 | 定 | 制 | 五 | 金


Whole House Custom Hardware

产品介绍 Product Introduction

使用前请仔细阅读本说明书,并妥善保管。
Please read this instruction manual carefully before use and keep it properly.

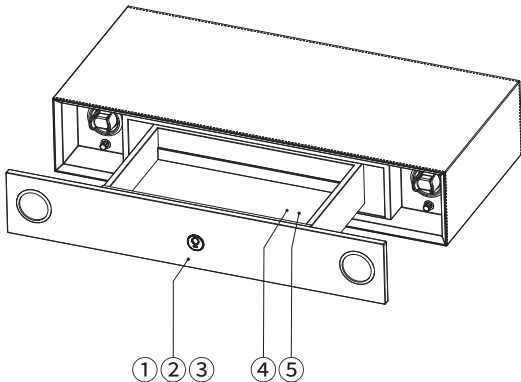

第一次打开抽屉需用钥匙或移动电源
For the first time opening the drawer, use the key or a mobile power source.

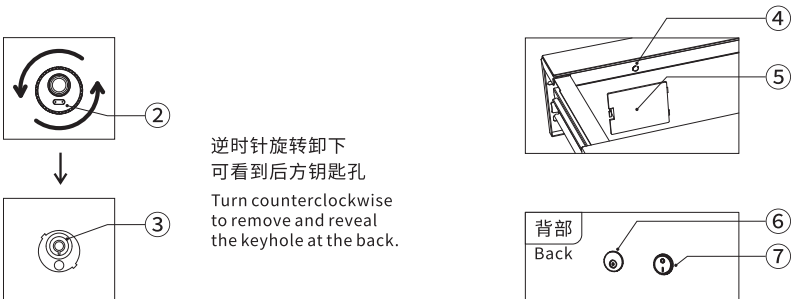

型号 Item No.	规格 Specification (W×D×H)	适用柜内空宽度 Applicative inner Width
6185390	860×440×192mm	864mm
6185310	960×440×192mm	964mm

旋钮共5个档位, 以下是档位说明
The watch winder has 5 settings, detailed as follows:

序号 No.	图标 Detail	解析 Description
①	OFF	关闭 Off
②		顺时针旋转;旋转约2分钟休息约6分钟, 然后重复 Clockwise rotation, rotates for about 2 minutes, then rests for about 6 minutes, and repeats.
③		逆时针旋转;旋转约2分钟约休息约6分钟, 然后重复 Counterclockwise rotation, rotates for about 2 minutes, then rests for about 6 minutes, and repeats.
④		顺逆交替旋转;正转约2分钟, 停约6分钟, 反转约2分钟, 停约6分钟, 以此重复交替执行 Alternate clockwise and counterclockwise rotation, rotates clockwise for about 2 minutes, rests for about 6 minutes, then rotates counterclockwise for about 2 minutes, rests for about 6 minutes, and repeats.
⑤		先顺时针旋转约5分钟后, 再逆时针旋转约5分钟如此连续约3小时后, 休息约9个小时。之后重复以上旋转周期 Rotates clockwise for about 5 minutes, then counterclockwise for about 5 minutes continuously for about 3 hours, then rests for about 9 hours, and repeats the above rotation cycle.

配件清单 Prats list



指纹锁操作说明 Fingerprint Lock Operation Instructions

指纹锁关联手机与指纹录入: Fingerprint Lock Mobile Association and Fingerprint Enrollment:

使用指纹器请先绑定手机后,再录入指纹。
To use the fingerprint lock, bind your mobile phone first, then enroll fingerprints.

涂鸦智能APP安装与相关连接:在说明书封面或手机应用商店(程序)里搜索“涂鸦智能”下载并安装APP→点击打开并注册涂鸦智能账号。

1. 添加设备:打开手机蓝牙,并在指纹器输入指纹,唤醒指纹器,主页面会自动弹出设备/若未发现设备则点击“添加设备或右上角的+”(图1)→手机显示已发现设备后点击“T055 添加”(图2)→添加设备成功。
2. 指纹的录入与删除:点击对应的设备(图3)点击成员管理,继续点击管理员(图4),可根据提示进行录入与删除指纹(图5)。

Tuya Smart App Installation and Connection:
Download and Install the App: Search for "Tuya Smart" on the instruction manual cover or in the mobile app store. Download and install the app. Open the app and register a Tuya Smart account.

1. Add Device:
Step 1: Turn on Bluetooth on your mobile phone and input a fingerprint on the fingerprint lock to wake it up. The main page will automatically prompt the device. If the device is not found, click "Add Device" or the "+" icon in the top right corner (Figure 1).
Step 2: Once the mobile phone detects the device, tap "T055 Add" (Figure 2).
Step 3: Device successfully added.
2. Fingerprint Enrollment and Deletion:
Step 1: Tap the corresponding device (Figure 3).
Step 2: Tap "Member Management" and then "Administrator" (Figure 4).
Step 3: Follow the prompts to enroll or delete fingerprints (Figure 5).

手机操作图示: Mobile Operation Illustrations:



指纹锁本地指纹录入: Local Fingerprint Enrollment for the Fingerprint Lock:

本地录入步骤:(按一下设置键→多角度短按6次→成功)
按一下设置键,将需要录入的手指放在指纹器上多角度反复按压6次(按压时,滴一下为一次,注意需多角度按压),录入成功。

- Local Enrollment Steps:
1. Press the setting button once.
 2. Enroll Fingerprint: Place the finger to be enrolled on the fingerprint sensor and press it 6 times at different angles. (each successful press is indicated by a beep).

注:建议先绑定手机再进行本地录入。
两种录入方式“本地录入和关联手机录入”的指纹,手机上都会在连接指纹器后同步更新。
Note: It is recommended to bind your mobile phone before local enrollment.
Fingerprints enrolled using either method ("Local Enrollment" or "Mobile Association Enrollment") will be synced and updated on the mobile app once connected to the fingerprint lock.

指纹锁恢复出厂设置

Fingerprint Lock Factory Reset Instructions


指纹锁关联手机与指纹录入:
Fingerprint Lock Mobile Association and Fingerprint Enrollment:

- 1.长按设置键10秒,此时恢复出厂设置。(已绑定的手机自动失效)
- 2.在蓝牙连接状态下,点击(图三右上角)→移除设备,此时会弹出下方两个选项:
解除绑定:解除手机与指纹器的绑定,不清除指纹器本地指纹。
解绑并删除数据:解除手机与指纹器的绑定,并同步清除指纹器本地指纹。(需在蓝牙连接状态下)
1. Press and hold the setting button for 10 seconds to reset to factory settings. (The previously bound mobile phone will automatically be unbound)
2. While in Bluetooth connection mode, tap (top right corner of Figure 3) →Remove Device. At this point, two options will appear:
Unbind: Unbind the mobile phone from the fingerprint lock without deleting the local fingerprints on the fingerprint lock.
Unbind and Delete Data: Unbind the mobile phone from the fingerprint lock and simultaneously delete the local fingerprints on the fingerprint lock. (This operation requires a Bluetooth connection)

摇表器操作说明

Watch Winder Operation Instructions

产品背面:
Product back:

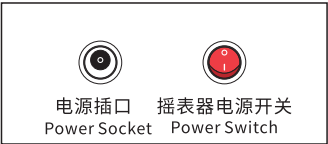

注:输入DC 5V=3A, 需用原装适配电源。电源开关在 I 位置时开启(通电)状态, 在 O 位置时关闭状态。
Note: Input DC5V=3A, use the original power adapter. When in the "I" position, it is turned on (powered), and when in the "O" position, it is turned off.

序号 No.	名称 Detail	解析 Description
①	指纹器 Fingerprint Sensor	可录20枚指纹。可逆时针旋转卸下, 露出后面钥匙孔。 Can store up to 20 fingerprints. Turn counterclockwise to remove and reveal the keyhole at the back.
②	USB插孔 USB Port	备用电源(*无充电功能), 可以使用普通移动电源供电。 For backup power (not for charging), can use a regular mobile power source.
③	备用钥匙孔 Spare Keyhole	紧急情况下机械开锁, 建议钥匙另外隐秘收藏。 (*钥匙不要放进抽屉里面*) For mechanical unlocking in emergencies. It is recommended to store the key separately in other place. (Do not store the key inside the case drawer)
④	设置键 Setting Button	用于设置指纹或者恢复出厂设置按钮。 (*注意长按设置键10秒钟以上可恢复系统初始化) Used for setting fingerprints or resetting to factory settings. (Note: Press and hold the setting button for more than 10 seconds to restore system initialization)
⑤	电池盒 Battery Compartment	放入4节5#干电池(*注意正负极方向*) Insert four 5# batteries (pay attention to the polarity)
⑥	电源插口 Power Socket	输入DC 5V=3A, 需用原装适配电源。 Input DC5V=3A, use the original power adapter.
⑦	电源开关 Power Switch	开关在 I 位置时开启(通电)状态, 在O位置时关闭状态。 Turn on (powered) when in the " I " position, and turn off when in the "O" position.